
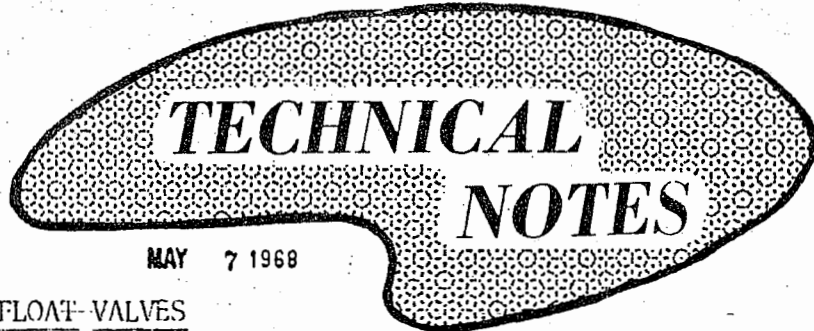


Master

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT
PORTLAND SERVICE CENTER
P. O. Box 3861
Portland, Oregon 97208

TECHNICAL
NOTE
8


1525.4
1400-451
P-67-165

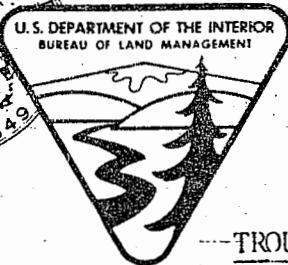


MAY 7 1968

TROUGH FLOAT VALVES

The present practice to ensure proper working float valves is to replace the complete unit. The parts which become worn most of the time are the rubber washer or the leather seal. (Picture 1 & 2)

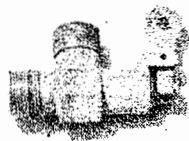

Picture 1

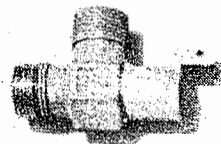

Picture 2

A float valve as ordered thru our catalogs


Normal disassembly of the valve

By examination it was found that the rubber washer and leather seal can be removed easily. These items can be purchased through local hardware stores and saves the purchasing of a new float valve unit. These repair parts can be carried for emergencies also. (Picture 3 & 4)



Picture 3

The washer shown removed

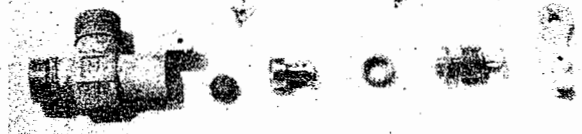

Picture 4

The washer and leather seal shown removed